


RSE300, RSE600 Thermal Imagers




To download SmartView® software, visit www.fluke.com/smartviewdownload.


1

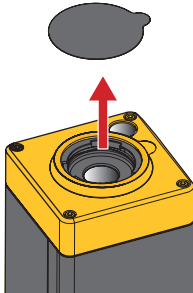


2

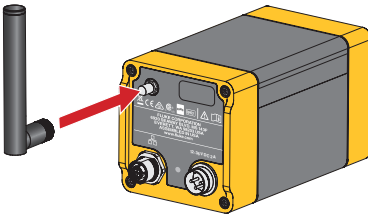


3

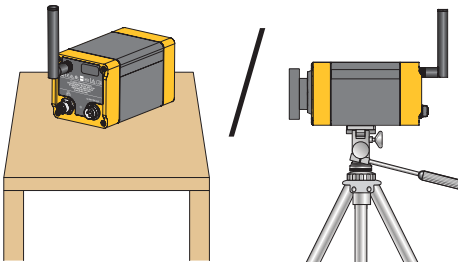

4

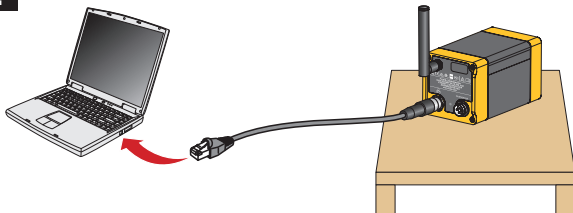

5

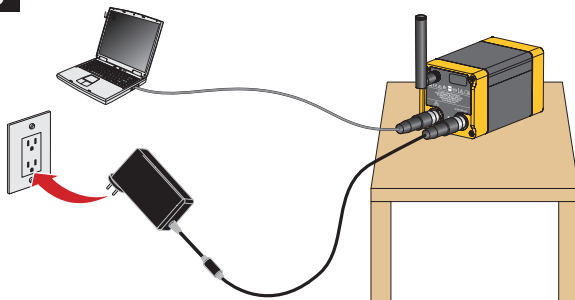

6

