

SmartView R&D installation procedure

Download SmartView R&D and install on your computer.

[Download](#)


After installation starts, you will be prompted to enter the **Installation Key**.

Connecting a thermal imaging camera

1. Connect the camera to the computer and power it on.

Note: For some models data streaming needs to be enabled on the camera.


2. Run Smartview R&D and click **Connect** button in the toolbar.

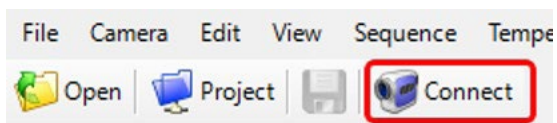


The Acquisition Setup dialog displays.



3. In the Camera drop down box select **GenICam TL / GigEVision**.

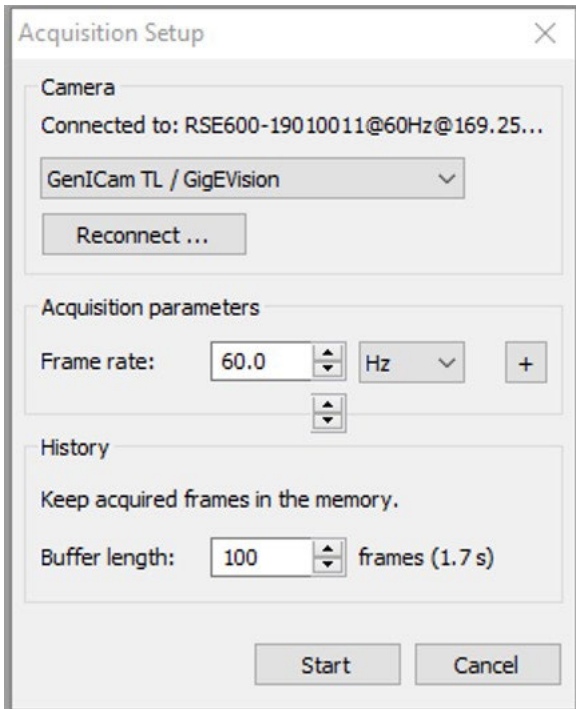

4. Select the **Connect/Reconnect** button. The **Select Camera** dialog displays.

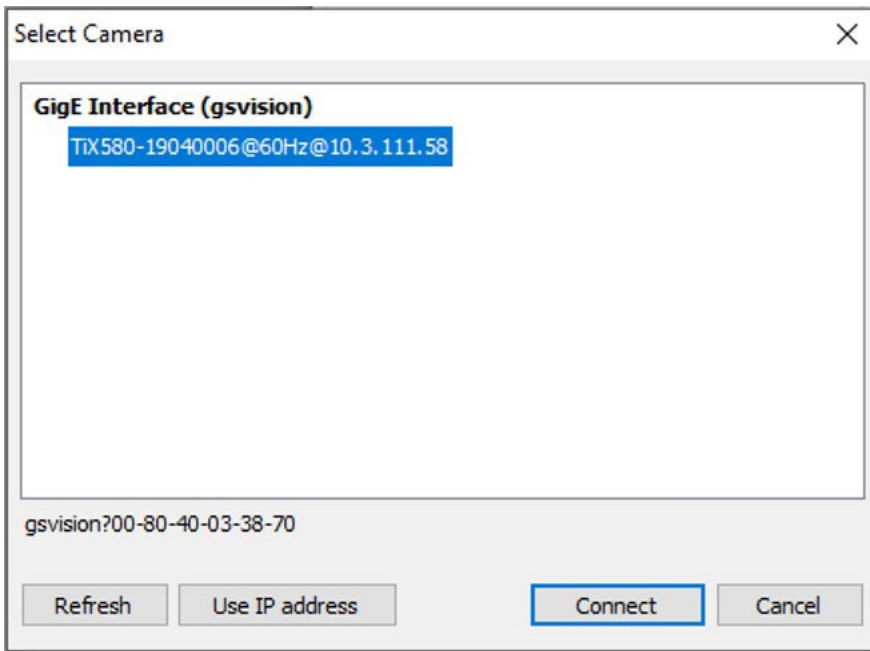


5. Select the camera name and then select the **Connect** button.

6. Select the **Start** button to start streaming IR data.



Recording IR video

1. Click on **Record Images** button in the toolbar

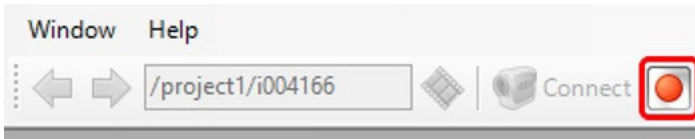

The Image Recorder dialog displays.

2. Select where you want to store your record by clicking on the **Change** button.
3. Click **Start** button to start recording and **Stop** to stop.

Fluke. Keeping your world up and running.®

Autorisierter Distributor



TVW Meßtechnik GmbH
Sommelweg 31
32257 Bünde
Fon: 05223 / 9277 - 0
Fax: 05223 / 9277 - 40
info@twwbuende.de
www.twwbuende.de

©2020 Fluke Corporation.
Specifications subject to change without notice.
06/2020 6013550a-en

**Modification of this document is not permitted
without written permission from Fluke Corporation.**

